

## DOCUMENT RESUME

ED 108 625

IR 002 141

AUTHOR Cooper, Pamela  
TITLE OPSCAN 100, Scan Tape Preparation for IMS Runs.  
INSTITUTION Southwest Regional Laboratory for Educational Research and Development, Los Alamitos, Calif.  
REPORT NO SWRL-TN-5-72-26  
PUB DATE 20 Apr 72  
NOTE 15p.  
EDRS PRICE MF-\$0.76 HC-\$1.58 PLUS POSTAGE  
DESCRIPTORS \*Data Processing; Electronic Data Processing; Information Systems; Input Output Devices; Magnetic Tapes; \*Management Systems; \*Optical Scanners; Recordkeeping; Tests; \*Test Scoring Machines  
IDENTIFIERS IMS; \*Instructional Management System; Mark Sense Readers; Offline Systems; OpScan

## ABSTRACT

An OpScan 100 optical scanner was used to score test materials received at the Southwest Regional Laboratory (SWRL) during the tryout of SWRL's Instructional Management System (IMS). This document describes the functional characteristics of the optical scanner. Directions for preparing two types of control forms processed by the scanner and sequential operating instructions for the scanner are included together with diagrams of the correct settings for the machine. Sample forms are also illustrated. (DGC)

\*\*\*\*\*  
\* Documents acquired by ERIC include many informal unpublished \*  
\* materials not available from other sources. ERIC makes every effort \*  
\* to obtain the best copy available. nevertheless, items of marginal \*  
\* reproducibility are often encountered and this affects the quality \*  
\* of the microfiche and hardcopy reproductions ERIC makes available \*  
\* via the ERIC Document Reproduction Service (EDRS). EDRS is not \*  
\* responsible for the quality of the original document. Reproductions \*  
\* supplied by EDRS are the best that can be made from the original. \*  
\*\*\*\*\*

ED108625



SOUTHWEST REGIONAL LABORATORY  
TECHNICAL NOTE

DATE: April 20, 1972

NO: TN 5-72-26

TITLE: OPSCAN 100 - SCAN TAPE PREPARATION FOR IMS RUNS

AUTHOR: Pamela Cooper

ABSTRACT

The Instructional Management System utilizes the OpScan 100 to optically scan test materials received from the schools through the U.S. Mail (ComSys I) and interschool courier service (ComSys II).

This is a description of the functional characteristics of the optical scanner. Directions for preparing Q and K sheets and sequential operating instructions are included.

U.S. DEPARTMENT OF HEALTH,  
EDUCATION & WELFARE  
NATIONAL INSTITUTE OF  
EDUCATION

THIS DOCUMENT HAS BEEN REPRODUCED EXACTLY AS RECEIVED FROM THE PERSON OR ORGANIZATION ORIGINATING IT. POINTS OF VIEW OR OPINIONS STATED DO NOT NECESSARILY REPRESENT OFFICIAL NATIONAL INSTITUTE OF EDUCATION POSITION OR POLICY.

## OPSCAN 100 - SCAN TAPE PREPARATION FOR IMS RUNS

At present SWRL utilizes the OpScan 100 optical scanner to score test materials for the Instructional Management System tryout. Raw data from five programs are mailed to SWRL, pre-processed, and then scanned. The resulting Scan Tape is used in the IMS ComSys I and II (mail mode) versions of the tryout.

When making IMS Scan Tapes, the OpScan operator must first preprocess the data. This involves thoroughly checking each test sheet for stray marks, erasures, staples, improperly coded Pupil ID's and other errors which would be inadvertently read or rejected by the scanner. Prior to this stage, the data are checked for missing ID sheets, missing test dates, incorrect Pupil Codes, missing Pupil List numbers and other teacher generated errors.

The OpScan operator completes page one of an IMS log form to indicate scan time and date (Figure 1). The IMS Run Control Sheet-II is filed with each completed run. The OpScan operator also maintains a record of the necessary preprocessing and/or errors in the tape. These are referenced by teacher name and run number.

### Functional Characteristics of the OpScan 100

In the OpScan 100 DM system, mark reading is accomplished by sensing differences in the reflectance of light by photocells mounted on a rotating scanning disc. As the light path sweeps across the moving form, the photoelectric cell detects the drop in reflected light caused by a pencil mark. The system's logic then interprets the mark as a

number or letter, codes it into computer language, and records it on a punch card. If there are two or more marks in a given grid, the unique scanning logic of the system will choose only the darkest mark, thereby ensuring accuracy. The system incorporates a "Darkest Mark" feature which eliminates the inadvertent reading of erasures, smudges and other extraneous marks.

The OpScan 100 optically reads  $8\frac{1}{2}$ " x 11" pencil marked sheets at the rate of 2400 per hour. Since this is accomplished off-line there is no involvement of valuable computer time during the mark reading process.

#### Forms Terminology

1. A Data Form is an  $8\frac{1}{2}$ " x 11" source document which may contain alphabetic, numerical, alphanumeric and/or test scoring information.
2. Control Forms
  - a. Q Control Form - The Q control form programs the scanner where to look for data on the data form.
  - b. K Control Form - The "key" form programs the scanner as to what type of data to look for on the data form.
3. A Response Position is a single marking position which may be pencil marked for optical reading.
4. Density is the number of available response positions per line (the horizontal designation).
5. A Grid is a related group of response positions beginning and ending on the same line. It can be either alphabetic,

numeric or alphanumeric. These marks are placed on the K control form to indicate which grids are alphabetic, the correct answers to a test, the pertinent data within the identification section, and the end of sheet parts.

The directions for preparing Q & K control forms containing PLC density are found in the operator's manual. Figure 2 contains directions which refer to examples found in the operator's manual. Figures 3 and 4 are samples of Q & K sheets used for the IMS identification sheets.

The following instructions are used by the OpScan operator. A more detailed version appears on pages 34-36 of the operator's manual. Refer to Figures 5, 6 and 7 for diagrams explaining these directions.

A. To Begin

1. Push the button labeled "Power" (1)
2. Push "DRIVE" (2)

B. To place magnetic tape on tape drive

1. Thread tape with several winds on the take-up reel
2. Push white and red switch on the top left of the recorder (1)
3. Turn center knob on recorder to "Local" (3)
4. Push "READY/LOAD" (green and white button) (2)
- Turn center knob to automatic (3)
- Hit reset button on scanner (D)

C. To Scan Data

1. Turn "MODE" knob to "S" position (E)
2. Turn "FORM" knob to "HI" position (12)
3. Turn "LOAD-SCAN" knob to "Q" position (9)

4. If feed rollers are not already operating, push "FEED/HOLD" (3)
5. Place Q-form in hopper
6. Check "ACCUMULATOR" lights for the correct number of marks on Q-form (14)
7. Turn "LOAD-SCAN" knob to "K" position (9)
8. Place K-form in hopper
9. Check "ACCUMULATOR" lights for the correct number of marks on K-form (14)
10. Turn "LOAD-SCAN" knob to "T" position (9)
11. Push "TEST/Q/K" (11)
12. Turn "LOAD-SCAN" knob to "P" position (9)
13. Push "TEST/Q/K" (11)
14. Check "ACCUMULATOR" lights; should register 32 (14)
15. Turn "LOAD-SCAN" to "S" position (9)
16. Turn "FORM" to "PC" position (12)
17. Place data forms in hopper

D. If data has several formats, repeat the steps under C using the appropriate Q and K forms.

E. To End Recording of Data

1. On the scanner, push "TAPE MARK" (5)
2. Push "RESET" (D)
3. Push "TAPE MARK" (G)
4. On the recorder, turn center knob to "LOCAL" (3)
5. Push "REVERSE" (5)
6. If tape stops push "REVERSE" again (5)

7. As tape comes off the take-up reel push the white and red switch to turn off the machine (1)
8. Finish rewinding tape by hand

Figure 1

IMS RUN	
TYPE	NUMBER
<input type="checkbox"/>	<input type="checkbox"/>
1	2-4

IMS RUN CONTROL SHEET - II

Scanner Station

Operator Name \_\_\_\_\_

Number of Scan Reruns ☐

7

Date \_\_\_\_/\_\_\_\_/\_\_\_\_  
Mo. Day

Source Scan Tape No. \_\_\_\_\_

	1st Run	2nd Run	AVERAGE
Scanner Time On (T6)	____:____	____:____	
Off (T7)	____:____	____:____	
Operating Time (T7-T6)	____:____	____:____	____:____
	Hrs. Min.	Hrs. Min.	Hrs. Min.

Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

690 Station

Scan Tape Processor \_\_\_\_\_

Number of Processing Reruns ☐

8

Date \_\_\_\_/\_\_\_\_/\_\_\_\_  
Mo. Day

Scores Data Input Tape No. \_\_\_\_\_

Pupil Data Base Tape No. IMS DB \_\_\_\_\_

RJS Operator \_\_\_\_\_

Number of Transmission Failures ☐

9-10

Date \_\_\_\_/\_\_\_\_/\_\_\_\_  
Mo. Day

Time Line Up (T8) \_\_\_\_:\_\_\_\_

Report Output Tape No. \_\_\_\_\_

Report Output  
Tape EOF Time (T9) \_\_\_\_:\_\_\_\_  
Hrs. Min.

Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_



FIGURE 2

Preparing Q and K Control Forms for Data Forms containing PLC Density  
(Optional Device 110)

1. Data Form (Reference Figure 8)
2. Q Control Form (Reference Figure 8A)

Placing the Matrix Rule over the example data form as illustrated, shows that the form is designed using PLC density. The rule is used to determine columns by number (1 through 38); a DS1109 form is used to determine lines by number. Auxiliary Line 3 is the first line that will contain data; therefore, it is necessary that Main Line 3 be programmed with Q marks. The completed example shows the placement of Q marks as indicated by the Matrix Rule.

NOTE: Fields located at the right side of the data form are provided for the high-speed printer.

3. K Control Form (Reference Figure 8B)

To provide a reference as to the placement of K marks, the Matrix Rule is used to determine columns by number. All grids on the left side of the data form are designed covering more than 10 response positions (indicators on the Matrix Rule). AK marks are placed on the control form for those grids. Figures 9, 10, and 11, are examples of data forms designed using both PLC and Hi densities. When preparing Q and K control forms for these types of data forms, the same methods will apply as outlined above. However, it is necessary that the PLC indicators on the Matrix Rule be used for the PLC section and the Hi density indicators be used for the sections containing Hi density.

When processing data forms containing PLC density, the scanner always begins scanning in PLC density. It will switch from PLC density to Hi density Identification at the "End of PLC" part mark and from Hi density Identification section to the Hi density Test section at the "End of Identification" part mark.


Figure 9, contains a PLC density section, a Hi density Identification section, and a Hi density Test section.

Figure 10 is an example of a data form consisting of a PLC density section and a Hi density Test section. A part mark is programmed at the end of PLC. The normal sequence is to process Hi density Identification, however, there is no Hi density Identification on this form. Another part mark is still required to program the machine from Hi density Identification to Hi density Test. From this point, the same rules apply as per Hi density Test, a part mark indicating end of test parts and end of sheet part mark.

Figure 11 is an example of a data form consisting of a PLC density section and a Hi density Identification section. Since the scanner switching sequence is PLC to Hi density Identification two part marks are used: PLC to Hi density Identification and End of Sheet.


Sheet



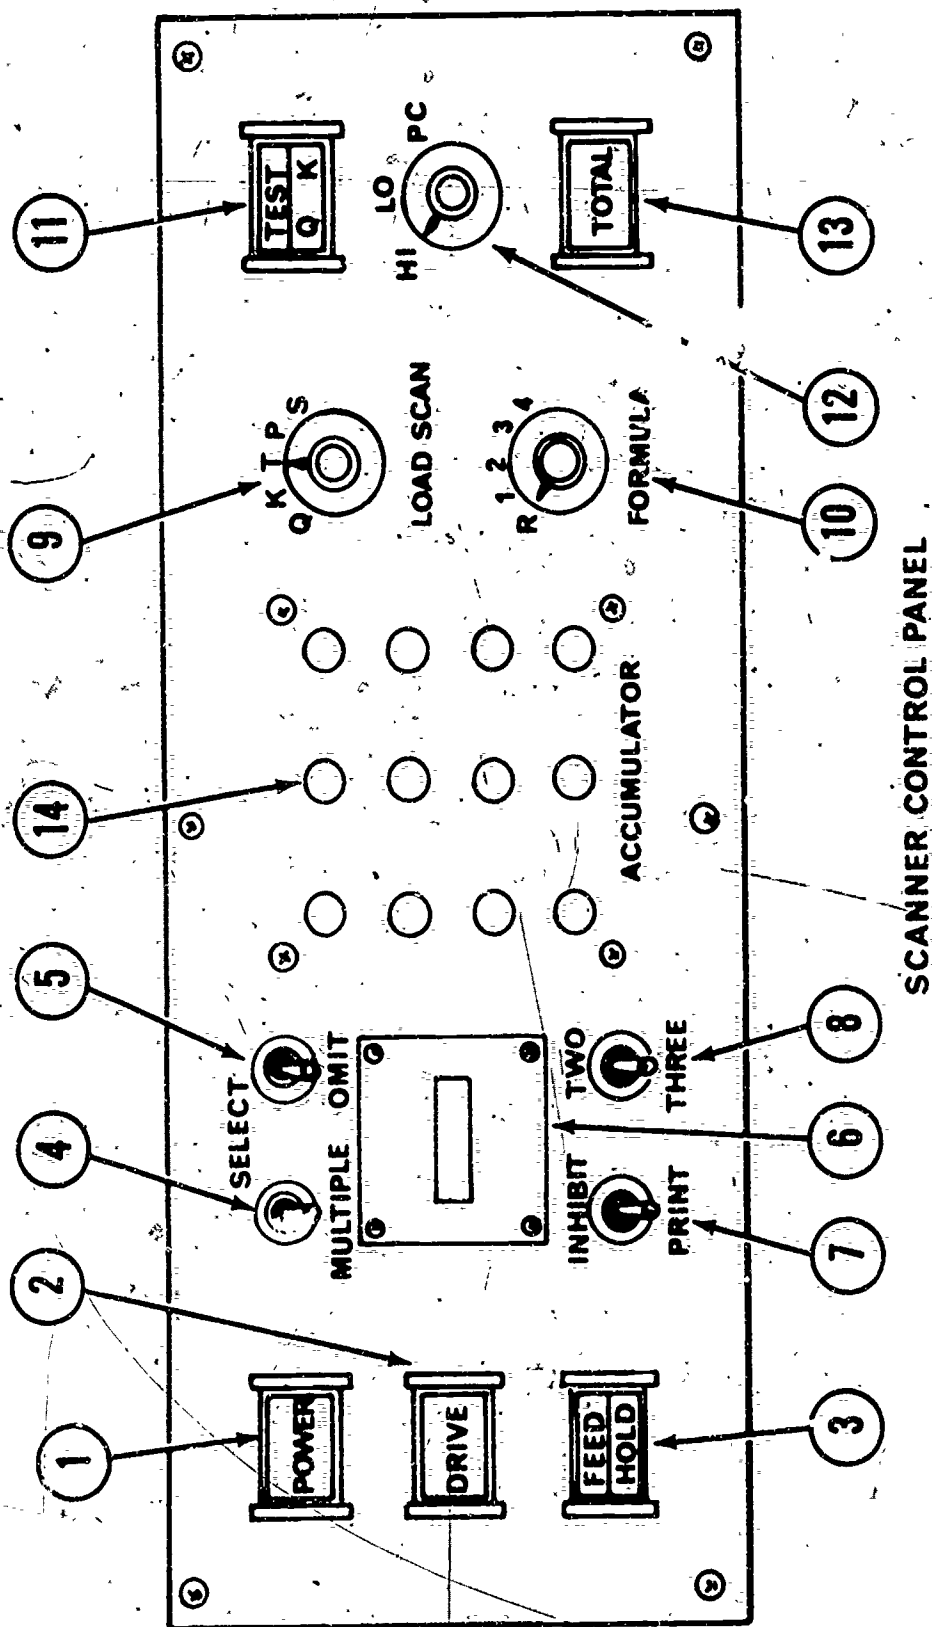

SCANNER CONTROL PANEL

Figure 5

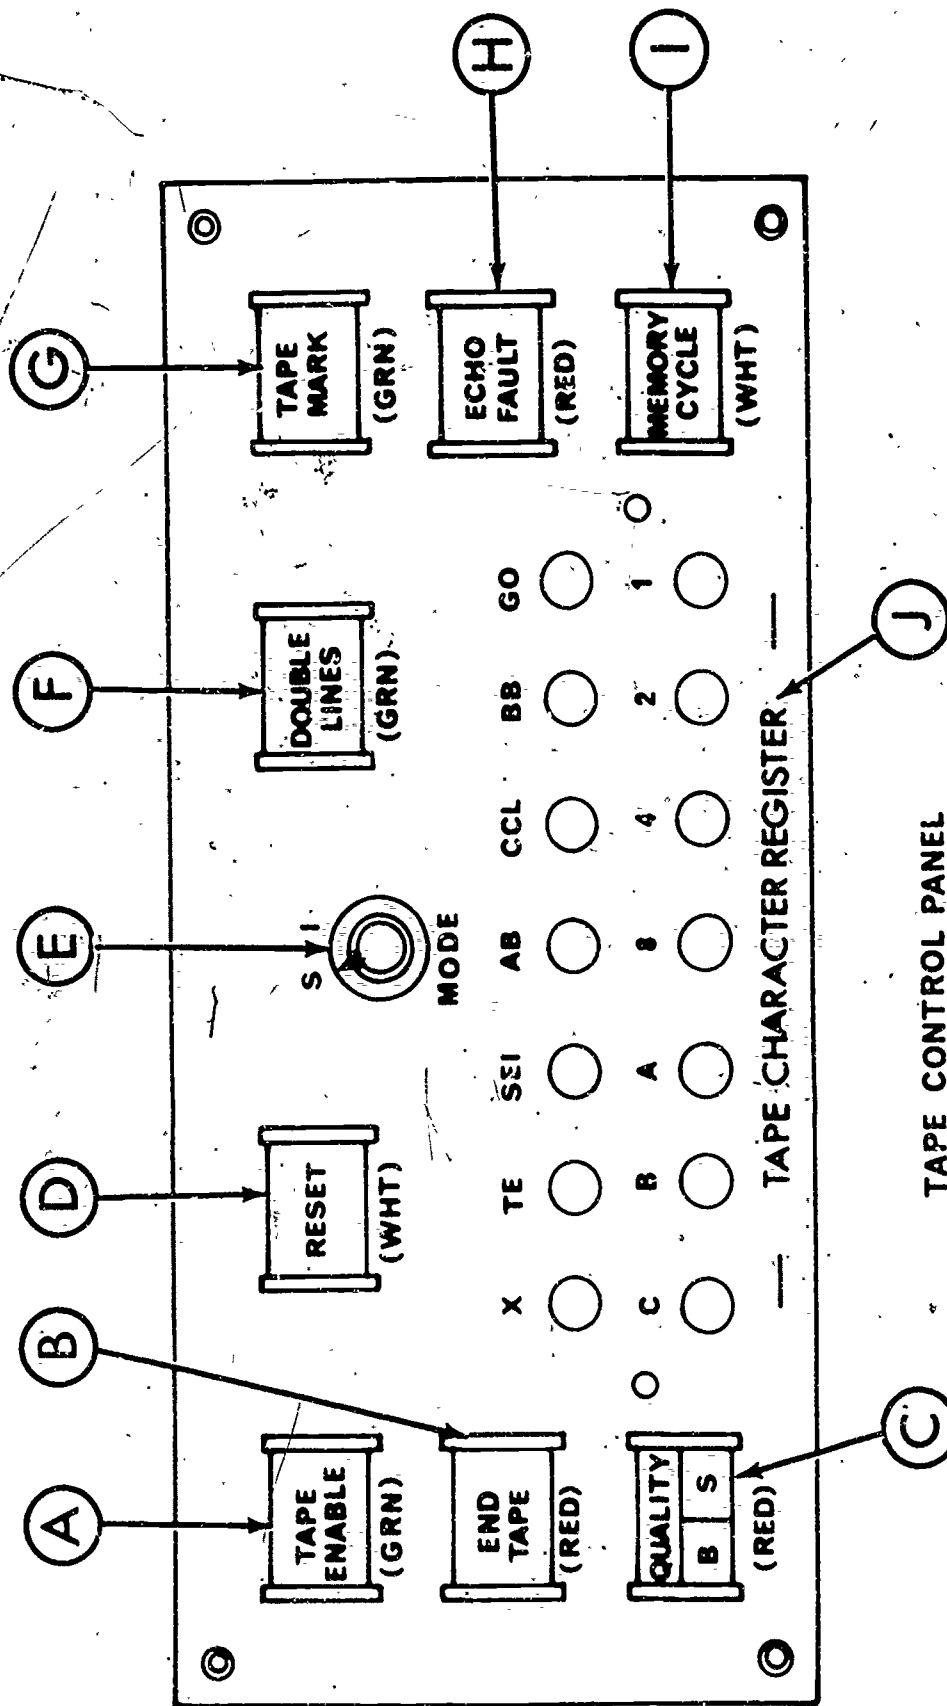

TAPE CONTROL PANEL

Figure 6

Figure 7

TAPE DRIVE

